


Operator's Manual

SEARCHMASTER

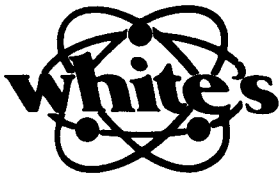

**CAUTION: NEVER USE THIS OR ANY OTHER
ELECTRONIC DEVICE AS A SUBSTITUTE
FOR A PHYSICAL PAT-DOWN.**

IT IS RECOMMENDED THAT YOU FAMILIARIZE YOURSELF WITH THE SEARCHMASTER BEFORE USING IT IN ACTUAL FIELD CONDITIONS. THIS WILL HELP YOU TO DETERMINE THE KINDS OF METAL OBJECTS YOU ARE ATTEMPTING TO DETECT IN ACTUAL SEARCHES.

CAUTION: NEVER USE THIS OR ANY OTHER ELECTRONIC DEVICE AS A SUBSTITUTE FOR A PHYSICAL PAT-DOWN.

The SEARCHMASTER comes assembled with 9 volt Alkaline battery installed. They are ready to be used after unpacking.

INSTRUMENT SENSITIVITY:

1. Sensitive area is around the area pointed to by arrows, and on both sides of that end.
2. The SEARCHMASTER is designed to detect all metals (except some stainless steel). It will detect items as small as razor blades.

INSTRUMENT OPERATION:

1. The instrument may be held with either hand. Hold the instrument such that your thumb is resting on pushbutton switch, and sensitive area arrows are pointing away from you.

2. When the pushbutton is depressed and held, a momentary audio signal will be heard, followed by a green ready light two seconds later. These two conditions indicate the instrument is ready for use.

NOTE: The instrument is turned ON and ready to operate for as long as the pushbutton remains depressed. Releasing the pushbutton automatically turns the unit OFF.

NOTE: Keep the sensitive area of the instrument away from large metal masses until you see the green ready light indicator, as this could impair instrument's performance.

3. It is recommended at this point that you further test the readiness of the instrument by passing a known metal object across the sensitive end. Note the presence of the audio signal and red LED indicator. If the signal is present, you may proceed with search.
4. In a search situation, the audio signal and red LED light dictate the presence of most metal objects.
5. To search an individual suspected of concealing one or more weapons, depress and hold the instrument's pushbutton while using the unit to scan a person's body. The instrument's sensitive area must be kept in close proximity to the part of the person being searched.

IMPORTANT: Before using this unit in an actual situation, the user should be familiar with the unit.

NOTE: Not all metal objects are weapons! And, there may be many non-metal objects that can be used as weapons. Remember, this instrument is a metal detector. Individual discretion must be used when determining if a detected metal object is a weapon.

PROPER CARE AND HANDLING:

DO check instruments operation periodically when unused for extended lengths of time.

DON'T store unit under extreme temperature or humidity conditions.

DON'T subject instrument to severe shock unnecessarily. Severe shock may impair the instrument's performance capabilities.

BATTERY:

Battery Life: 10 - 12 hours of actual operating time. When the unit's green LED light does not glow, or glows erratically, the battery is below its minimum operating level and should be replaced. **DO** replace battery with new **ALKALINE 9 volt battery** when necessary.

To replace the battery, remove the two screws on sides and separate the top from the bottom.

WHITE'S ELECTRONICS' LIMITED WARRANTY

If within 90 days from the original date of purchase your White's accessory or detector fails through normal use or due to defects in either material or workmanship, White's Electronics will repair or replace, at its option all necessary parts without charge for parts or labor.

Simply return the accessory or detector to the dealer where you purchased it. The unit must be accompanied by a completed service coupon provided by your dealer. You must provide proof of date of purchase before the unit is shipped.

Items excluded from this warranty are non-rechargeable batteries, headphones and other accessories.

The warranty is not transferable. Nor is it valid unless the Warranty Registration Card is returned to the factory address below within ten (10) days of original purchase for the purpose of recording that date, which is the actual commencement date of the warranty.

The warranty does not cover damage to accessory or detector caused by accident, misuse, neglect, alterations, modifications or unauthorized service.

Duration of any implied warranties (e.g. merchantability and fitness for a particular purpose) shall not be longer than the stated warranty.

Neither the manufacturer nor the retailer shall be liable for any incidental or consequential damages resulting from defects or failures of the instrument to perform.

Some states however, do not allow limitations on the length of implied warranties, or the exclusion of incidental or consequential damages. Therefore, the above limitations and exclusions may not apply to you.

In addition, the stated warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

White's Electronics, Inc.,
1011 Pleasant Valley Rd., Sweet Home, OR 97386

white's electronics, inc.

1011 Pleasant Valley Rd. Sweet Home, Oregon 97386

P/N 621-0256

Printed in U.S.A. 3/84